
Pharmacy Information System (PhIS) and Clinic Pharmacy System (CPS)

PhIS & CPS IP Setup on THP B-FV4T Manual

Version : 1.0

Document ID : PhIS_CPS/IP_Setup_on_THP_B-FV4T_Manual_v1.0



Contents

Revision History	iv
Guideline setup IP Address for Thermal Printer Toshiba B-FV4T-GS	5
Prerequisite:	5
Purpose:	5
Download:	5
Installation:	5



© 2011-2023 Pharmaniaga Logistics Sdn Bhd (PLSB)

CONFIDENTIAL COPYRIGHTED MATERIAL – *The information includes all concepts, comments, recommendations, and material, contained here in shall remain the property of Pharmaniaga Logistics Sdn Bhd (PLSB). No portion of this document shall be disclosed, duplicated or used in whole or in part of any purpose other than the purpose of the Pharmacy Information System & Clinic Pharmacy System (PhIS & CPS) Project execution only.*



Revision History

Version No.	Date of Release	Consolidated by	Verified by	List of changes from Previous Version
1.0	18-1-2023	Mohd Ridhwan Jamaluddin Arif Syahrir Mohd Isah	Sophian Ezudean Mustapha	Initial document

Verified and Acknowledge by

Name	Role / Designation	Organization	Signature & Date
Sophian Ezudean	Manager	Pharmaniaga Logistic S/B	
		Program Perkhidmatan Farmasi (PPF), KKM	
		Bahagian Pengurusan Maklumat (BPM), KKM	

Peer Review

Version No.	Reviewed / Verified by	List of changes from Previous Version
1.0	(QA) Juridah	- Overall review

Guideline setup IP Address for Thermal Printer Toshiba B-FV4T-GS

Prerequisite:

1. Toshiba B-FV4T-GS
2. USB cable
3. B-FV Setting Tools (software)
4. Setup must be performed in the Admin Account

Purpose:

To configure IP address setup at Toshiba B-FV4T-GS

Download:

Please download B-FV Setting Tools or can find the installer at PhIS Admin account


https://www.toshibatec.com/download_overseas/printer/setting_tool/B-FV4_Series/

Installation:


1. Install B-FV Setting Tools
 - Double click on downloaded .msi files as shown below

 B-FV Setting Tool_V1.0.41.146


- Click on Next to proceed with installation

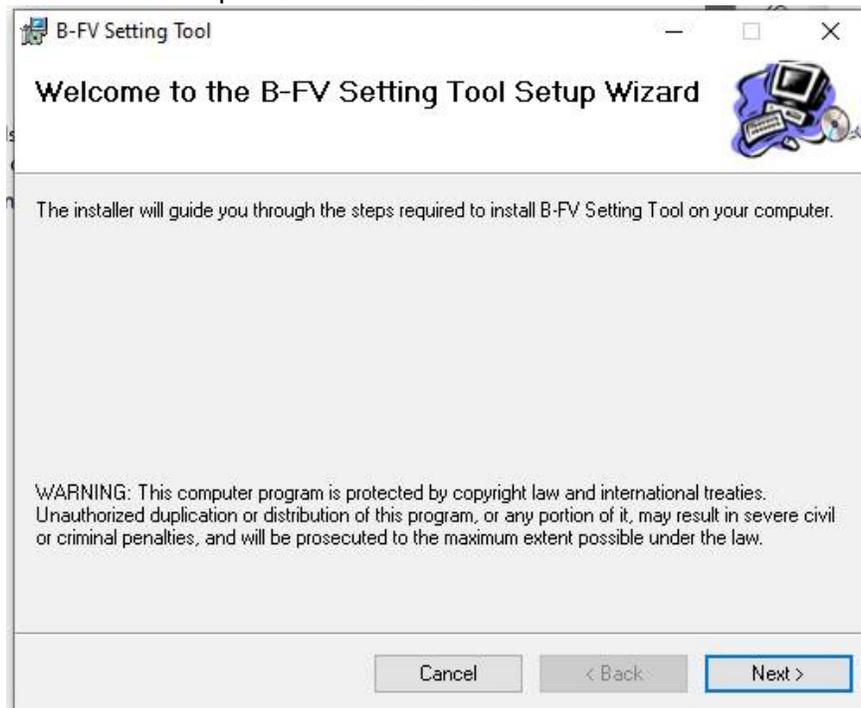


- Tick "I Agree" and then click button Next

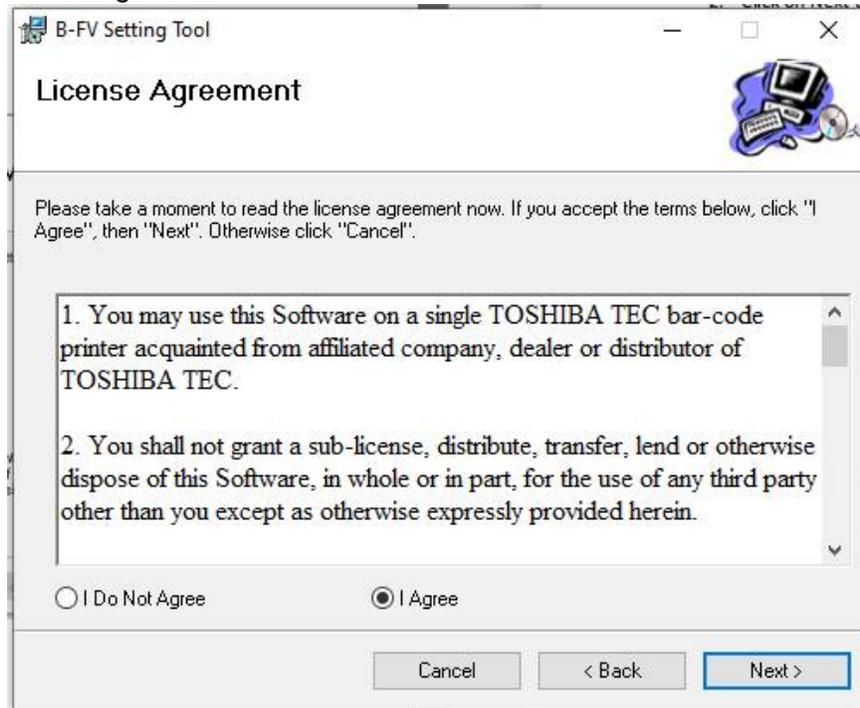


- Click button Next for installation folder

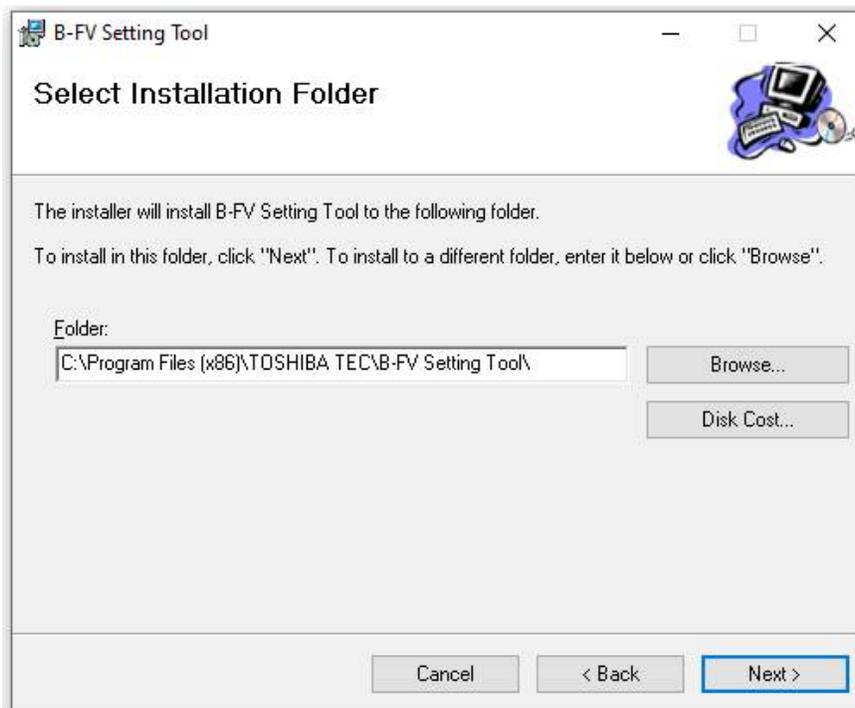

Click button Next to start installation

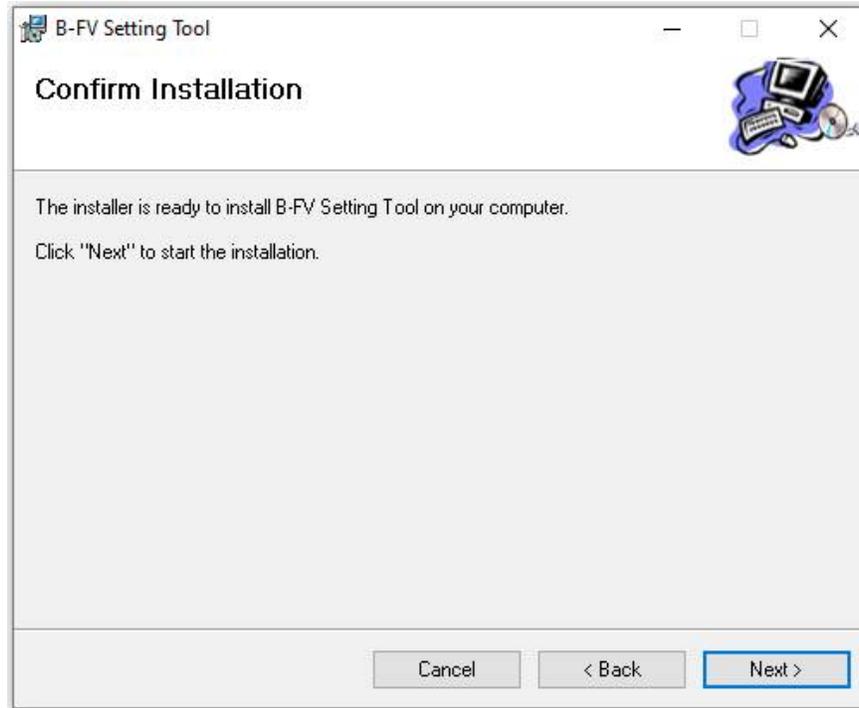

- Click Close button to complete the installation.

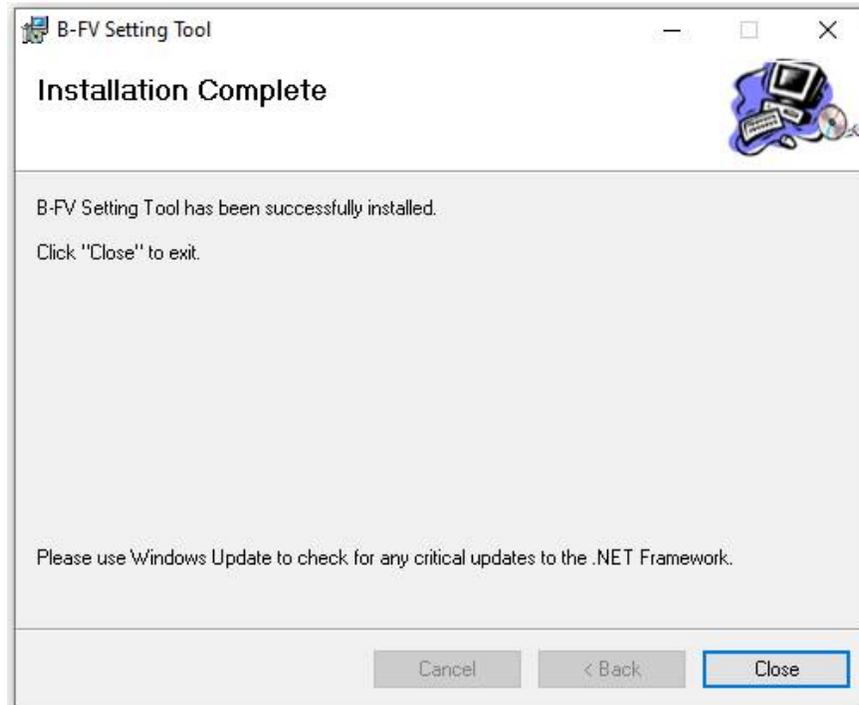


2. Run B-FV Setting Tool


- Please connect Toshiba B-FV4T-GS printer with Computer using USB cable.
- After finish install the tools, double click the icon B-FV Setting Tool at desktop.




- Please select USB and click get status. Make sure the status is 'Online'.

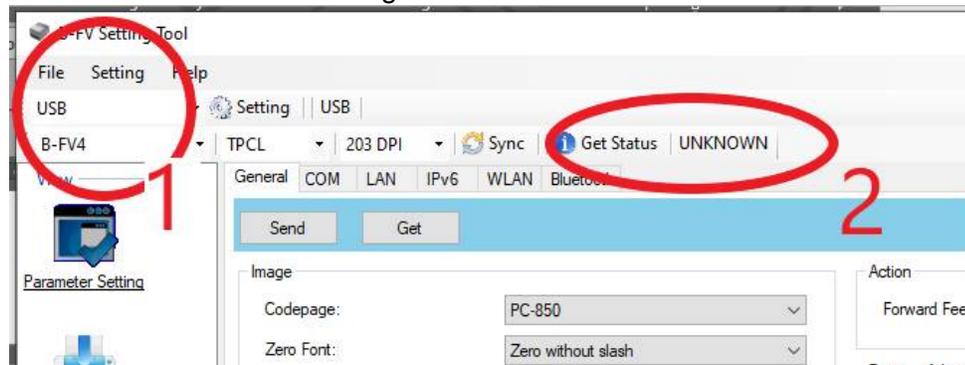

- Click at LAN tab, then set IP address, subnet mask, and gateway at TCP/IP part. Then set DHCP as disable. Click button Send after finish configure.

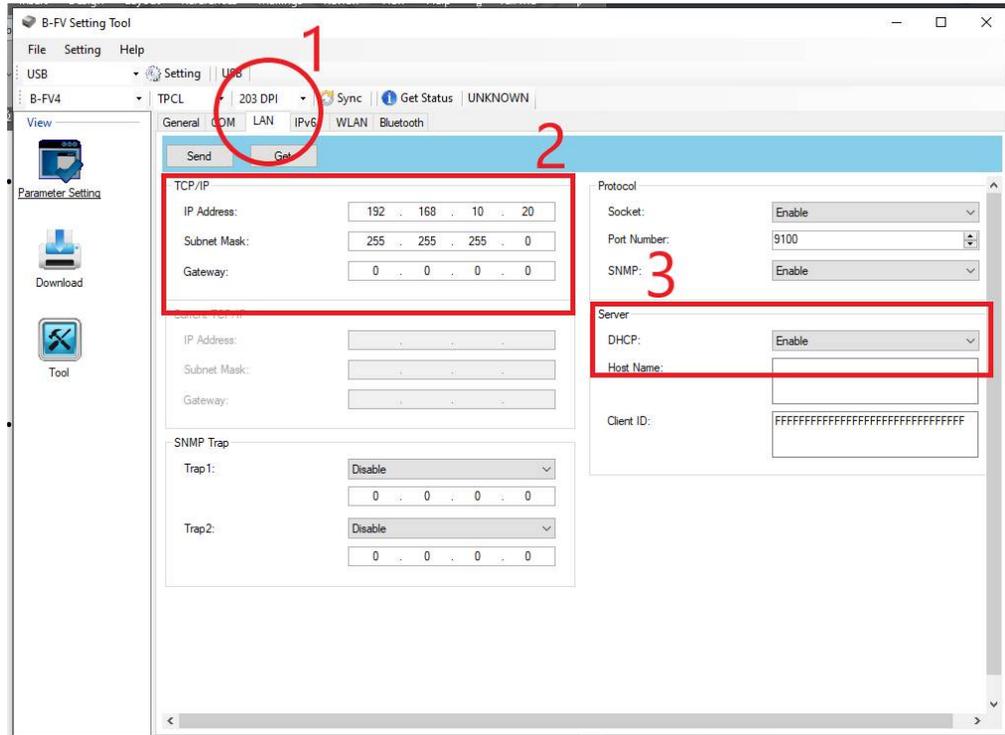

- Click Yes to proceed

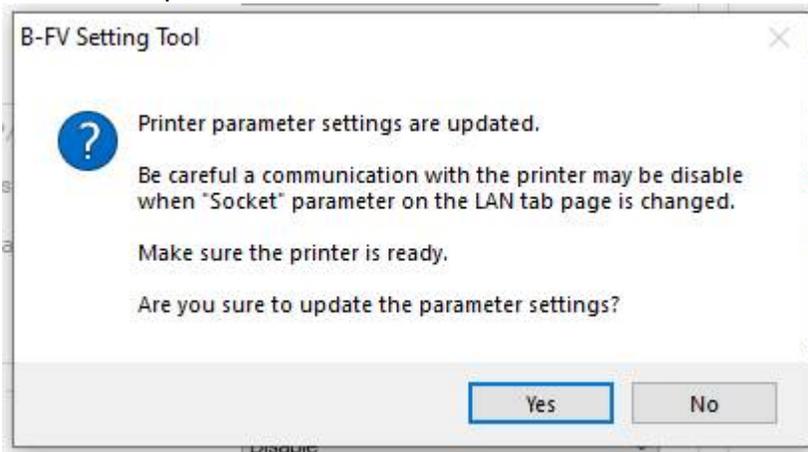



Verify the connection:

To check whether the connection is up, test connection using command prompt.

Type: **ping 10.x.x.x (IP address set for printer)**, then enter

```
C:\WINDOWS\system32\cmd.exe
Microsoft Windows [Version 10.0.19044.2130]
(c) Microsoft Corporation. All rights reserved.
C:\Users\RIDHWAN>ping 10.32.2.30
```

If get the reply, try test print at printer properties. If print test success, then the configuration IP for printer is successful.